



**Weatherford®**

## ZoneSelect® SingleShot Stimulation Sleeve

Frac more stages in cemented  
and openhole wells



# Fracture up to 60 stages in a single job

The Weatherford ZoneSelect® SingleShot stimulation sleeve has the unique ability to fracture up to 32 zones in a cemented application—the highest stage count of cementable graduated seat sleeves in the industry. Moreover, when used in openhole wells, the sleeve can fracture up to 60 stages.

You can continuously isolate below this sleeve, shift to open ports, stimulate, and then move to the next zone for quick, efficient stimulation.

## Wiper Darts

Compatible Weatherford wiper darts ensure cement displacement and cleaning through the wellbore.

## Connections


Upper and lower connections are compatible with industry-standard casing threads.


## Shear Ring

Our proprietary shear ring enables accurate activation pressure and provides a positive indication of shear at the surface.

## Landing Seat

An induction-hardened, cast-iron landing seat makes milling out fast and easy.

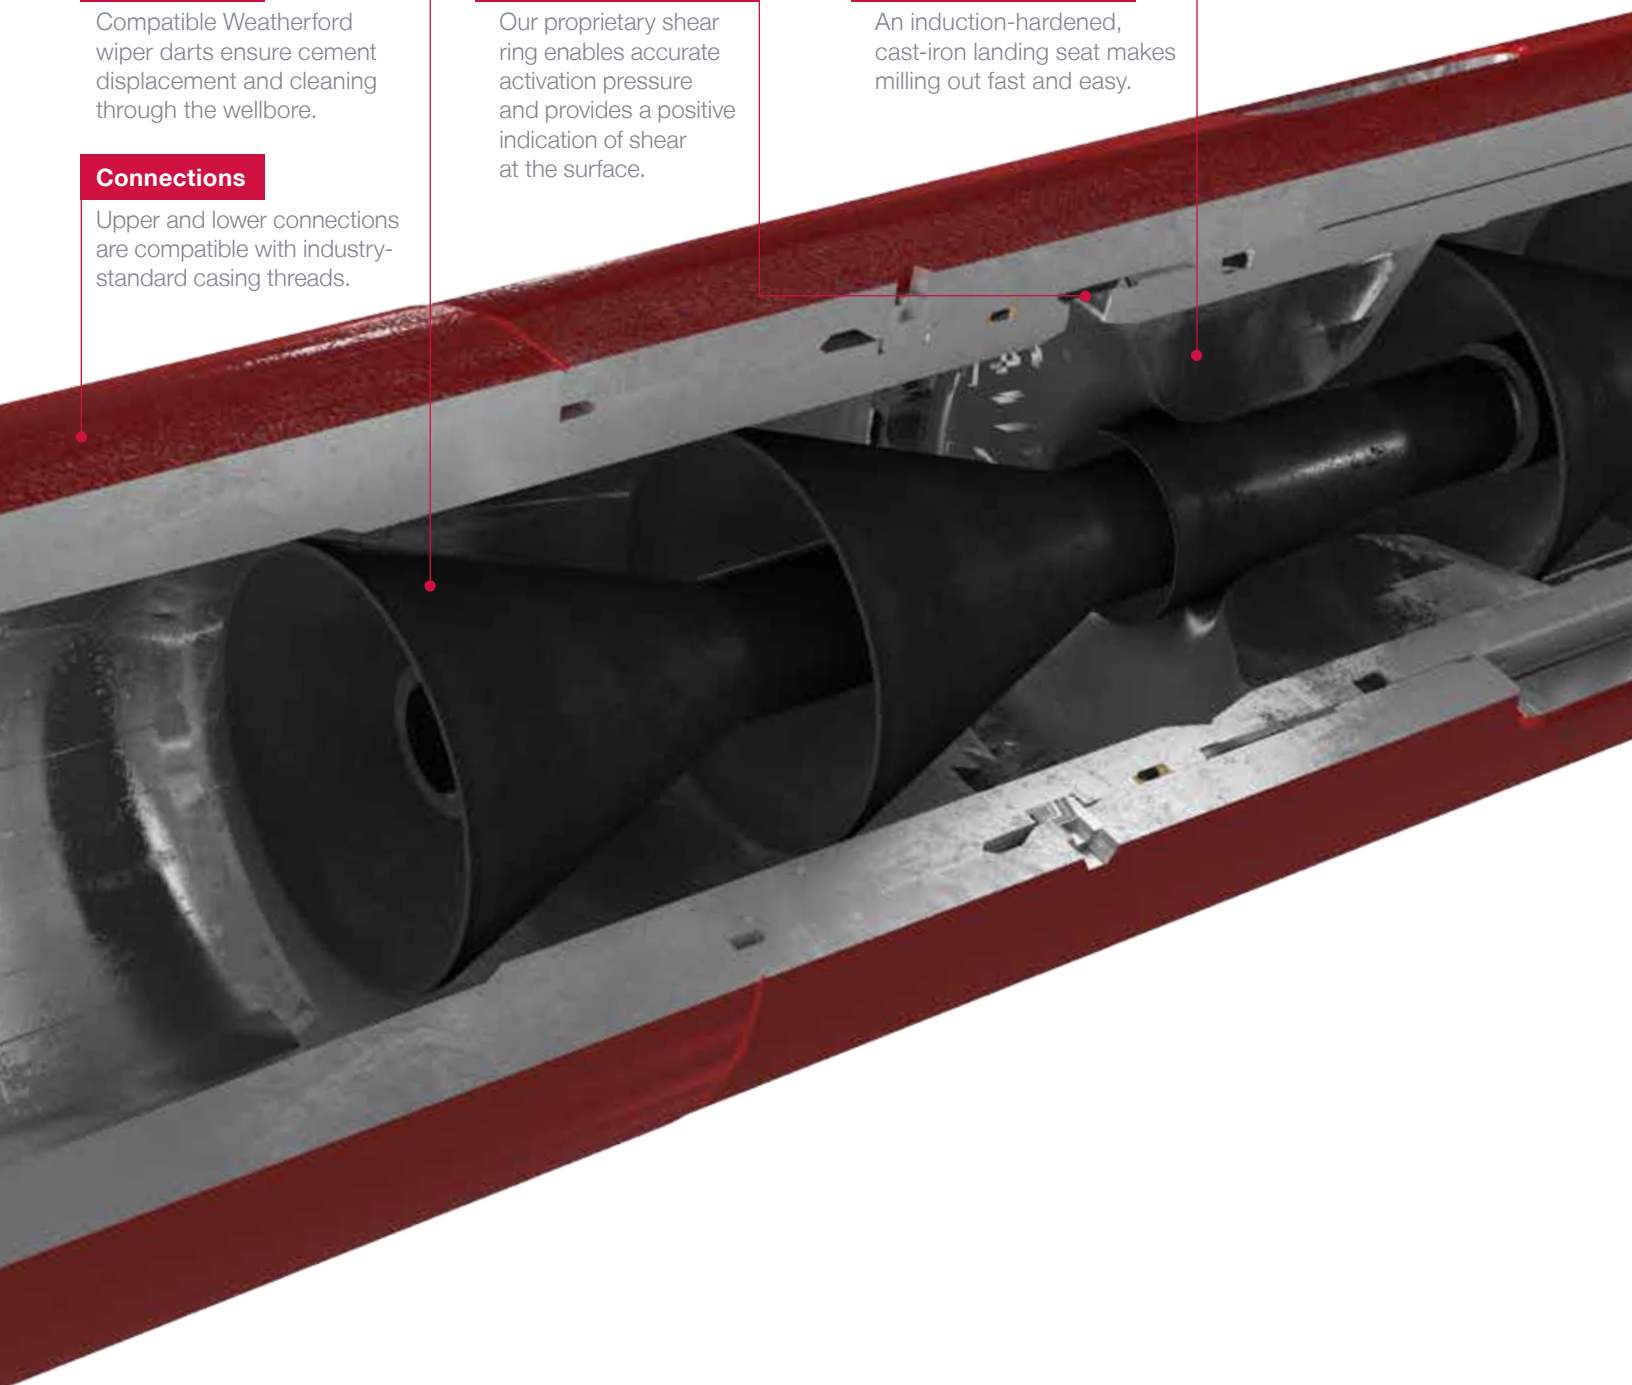

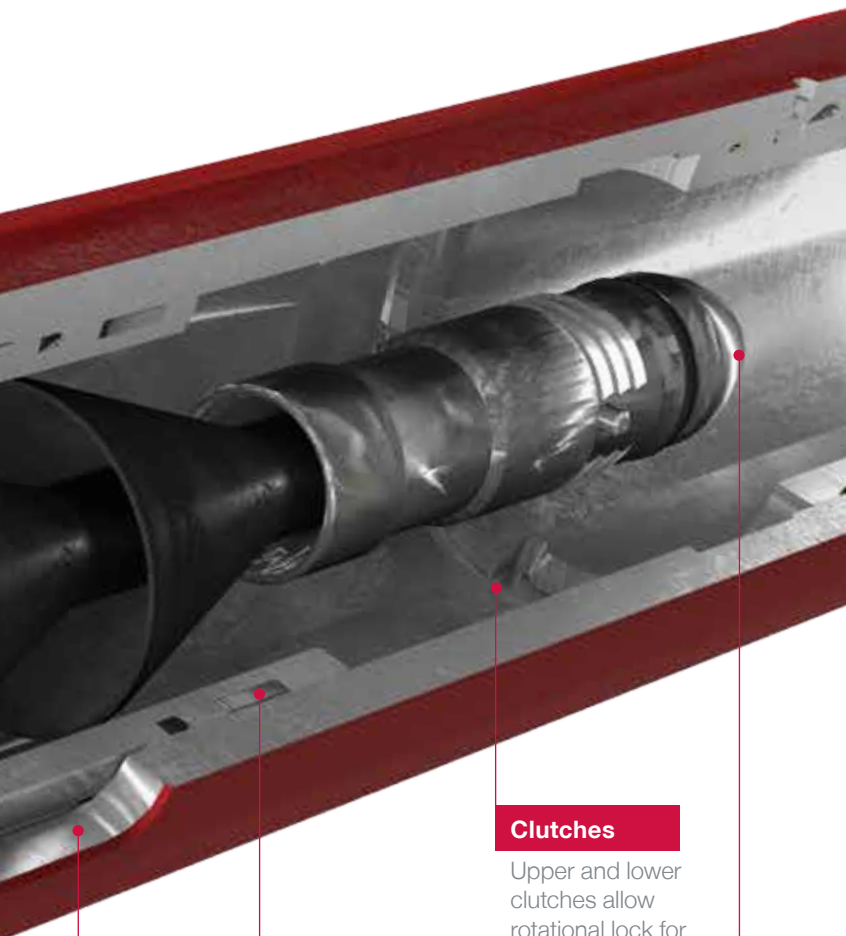

#### Snap Rings

Snap rings lock in the open position.

#### Flow Ports

Large flow ports maximize frac flow for effective stimulation.

#### Clutches

Upper and lower clutches allow rotational lock for efficient mill-out in both the open and closed positions.

#### Dart Nose

Snap-in dart nose provides robust plug bump and pressure hold.

## Go even farther with the complete ZoneSelect system

- Fracture additional stages with **i-ball® sleeves** actuated by a single-size ball and **coiled-tubing sleeves** actuated by a shifting tool.
- Optimize isolation and removal with **millable composite frac balls** and **dissolvable metallic frac balls**.
- Achieve full pressure with **time-delay toe sleeves**. After pressure testing, initiate precise actuation with **rupture disk toe sleeves**.

By combining SingleShot sleeves with other ZoneSelect technologies, you can fracture even more stages to reach the optimum balance between production and investment.

Industry-highest stage count among cementable graduated seat sleeves.

**32-stage**  
cemented completion\*

**60-stage**  
openhole completion\*

\* Results achieved using 4.5-inch system

Proven performance in the field.

**55,000**  
zones successfully fractured

The SingleShot stimulation sleeve is part of our ZoneSelect® fracturing completion system for stimulating multizone wells. For more information about our well completion products and services, contact us at **FracSleeve@weatherford.com** or visit **weatherford.com**.



**weatherford.com**

© 2015 Weatherford. All rights reserved. 11740.00

Weatherford products and services are subject to the Company's standard terms and conditions, available on request or at weatherford.com. For more information contact an authorized Weatherford representative. Unless noted otherwise, trademarks and service marks herein are the property of Weatherford and may be registered in the United States and/or other countries. Weatherford products named herein may be protected by one or more U.S. and/or foreign patents. Specifications are subject to change without notice. Weatherford sells its products and services in accordance with the terms and conditions set forth in the applicable contract between Weatherford and the client.